



MultiLoader V4.2 Installion Instructions

1. Install .Net Framwork 1.1.4322
2. Install Sniper Multiloader V1.0
3. Install Sniper Multiloader V4.2
 - a. Replace Older “Sniper Multiloader Utility.exe” with newer file found in sniper multiloader V4.2 Folder.
C:/ Programe Files/Sniper Performance/Sniper Multiloader Util
4. Plug Sniper interface into USB Port of your PC
 - a. Device Found Install Drivers
C:/Program Files/sniper Performance/Drivers
5. If Drivers are not available in the above folder please install DeltaForceSoftware or Copy Drivers Folder from CD into
C:/Program Files/Sniper Performance
6. Repeat Steps 4 & 5.